


Carena

MATVIK
HIGH CHAIR

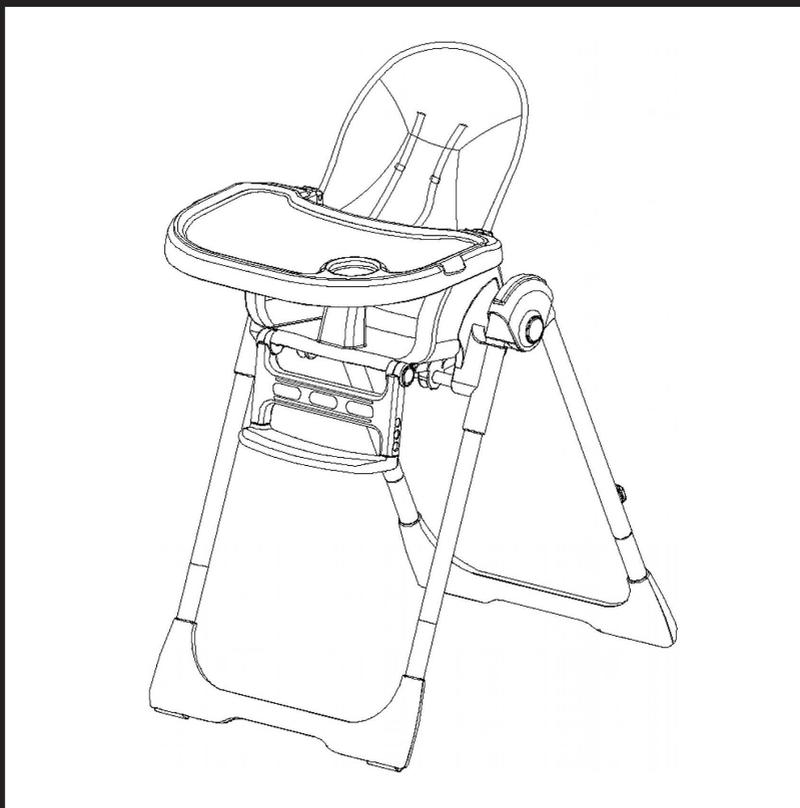

SE / FI / NO / DK / GB


Thank you for purchasing HONEYWAY BABY high chair.

- The figures in the instruction are to illustrate the right operation and product structure. When there is a small difference between the real and the picture, pls refer to real one.
- In order to improve the quality of products. We may have improved the quality without Informing you in advance. Pls forgive us.

WARNING:

- Read the instruction manual before using this product.
- If not operate according to instruction, it may dangerous for children.
- When the children are sitting in the chair. Don' t leave him unattached.
- This product is suitable for children who are 6-36 months old.
- Don' t use when the chair parts are broken, tearing or missing.
- Be sure all users are familiar with operation and the chair can be opened and closed easily.
- If not. don' t operate forcibly and read the instruction to do it in right way.
- Please carefully check all parts can be normally installed and adjusted. Be sure all the locks are locked in a state.
- Children must be use safety belt when sit in the chair, in order to prevent them fall or slide out from the chair, and seriously hurt.
- Please do not use this product when your baby is unable to sit independently.
- Don't let your child play or climbing alone, hanging on the chair.
- The product can only be used on flat、 stable ground. Avoid the chair trun over, don' t put overweight goods on the tray.
- Avoid placing the chair near the heat source, such as electric heater, gas heater, or any places that are dangerous for children.

Assembly drawing

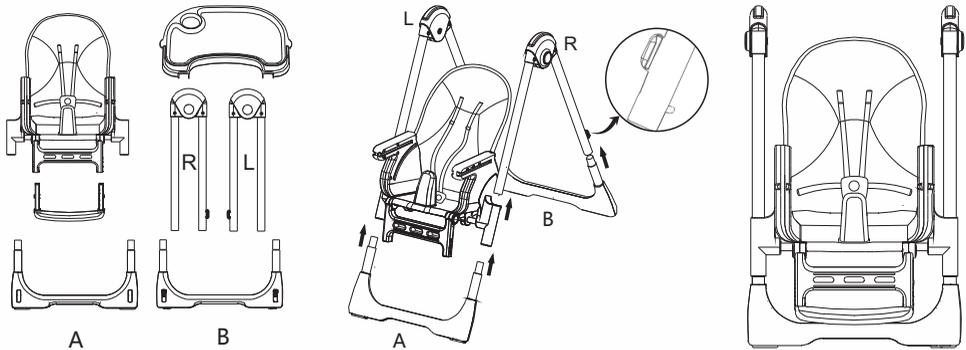

Step 1: Insert left and right foot tube(L.R) into chair body separately according to arrow direction.


Step 2: Insert front and rear foot tube(A.B) into foot tube support.
(A:front foot tube. B: rear foot tube)

WARNING:

Make sure the shrapnel of the foot tube is completely locked tube support before next operation. According to chair safety test. Make sure fixed and non-slip foot tube A is installed at the front of chair. And foot tube B which with wheels are installed at rear.

Opening ways of Chair stand


Press the button on both sides, open front and rear tube to maximum 1. Loosen the button, try to fold two foot tubes and confirm they are locked. Then pull the chair upward to highest position 2. Make sure the whole chair is in stable state.

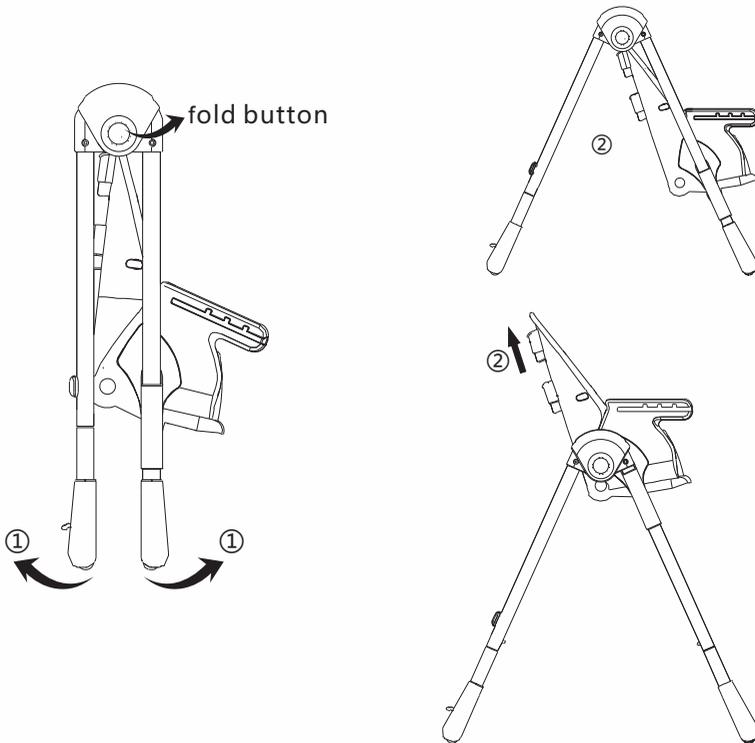

(pic 1)

Foot pedal installation


As shown by the arrow, put the foot pedal set into chair body square hole.

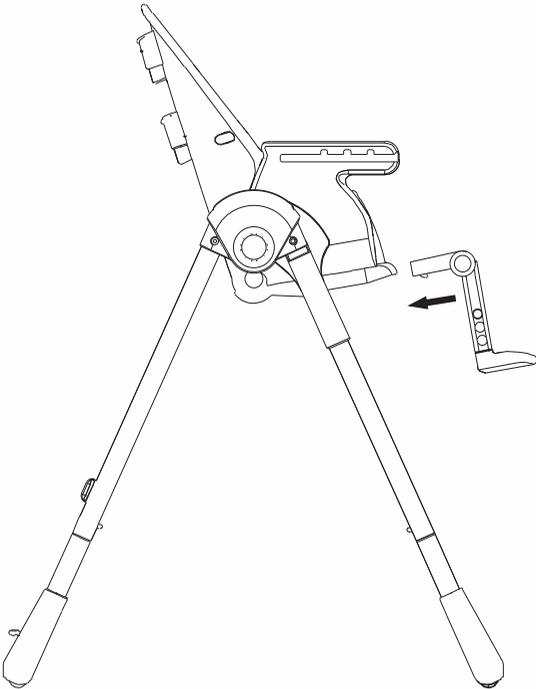

(pic 2)

Foot pedal angle adjustment


Press the round adjustable button on both pedal sides. Rotate the pedal up and down with the button as axis. Pedal can be adjusted with three positions.

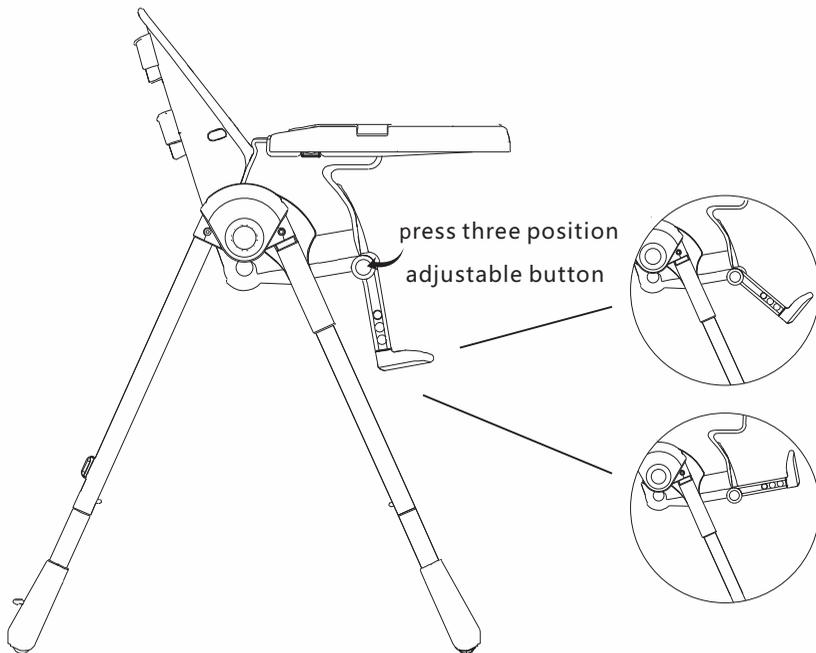

(pic 3)

Pedal height adjustment

Hold the height adjusting button in 3 holes of pedal two sides, Push the lower part of the foot pedal downwards, make it locked in the lower hole, This is lowering the pedal.. Otherwise, push the pedal upwards to make it lock in above holes. This is rise the pedal. Pedal can be adjusted With three position.

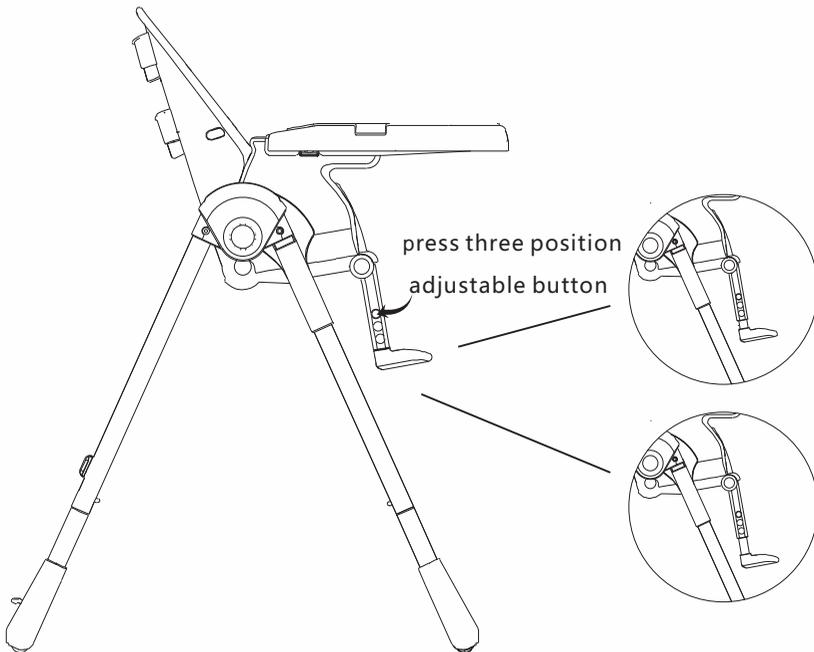


(pic 4)

Tray assembly instruction

Put tray directly to the both armrest of main body and press bilateral button under the tray.


The tray has three optional position, can be moved forward or backward.

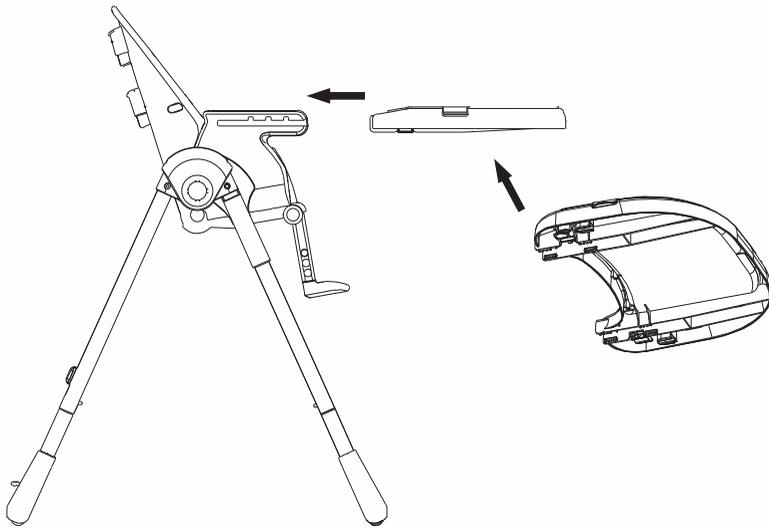

(pic 5)

Tray removed instruction

- 1、 Press bilateral button under the tray, and pull it out.

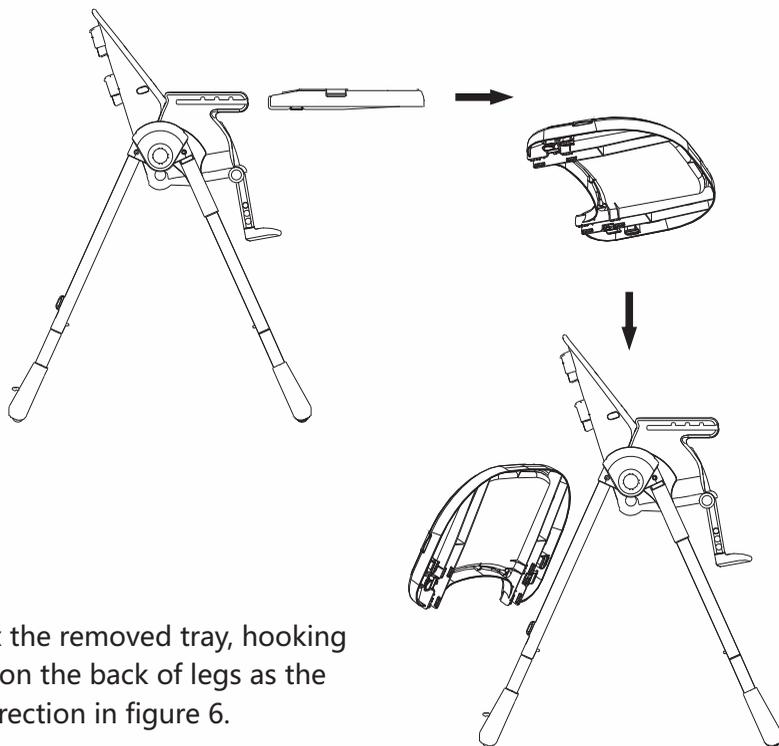


- 2、 To fix the removed tray, hooking the tray on the back of legs as the arrow direction in figure 6.

(pic 6)

Chair height adjustment

Lift the up and down button at the backrest to adjust needful position of chair body.

⚠ WARNING: Prohibit to adjust up and down when child in the chair to avoid any injury!

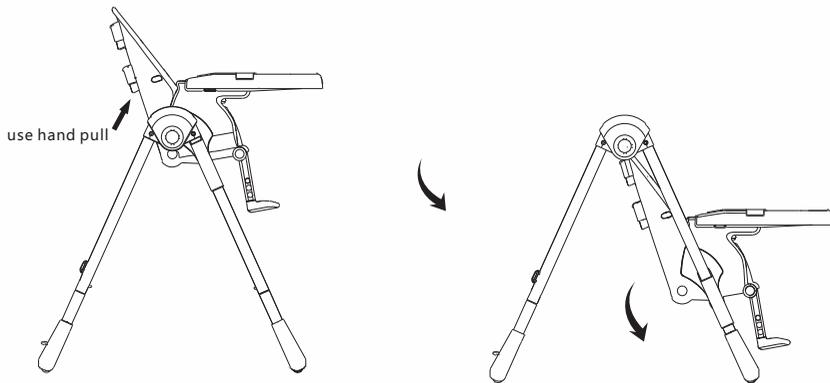


⚠ WARNING: This product uses the brake friction plate to control up and down of chair body. Pls keep the foot pipe support clean when in the use and preservation process. Avoid oil stain, water and drink liquid stains. In order to avoid friction piece anti-slip failure. If meet above phenomenon, pls clean up in time. Completely dry before you can continue to use.

(pic 7)

Backrest angle adjustment

! WARNING: when the backrest is in perpendicular state, It is only suitable for child who are 6 months old.

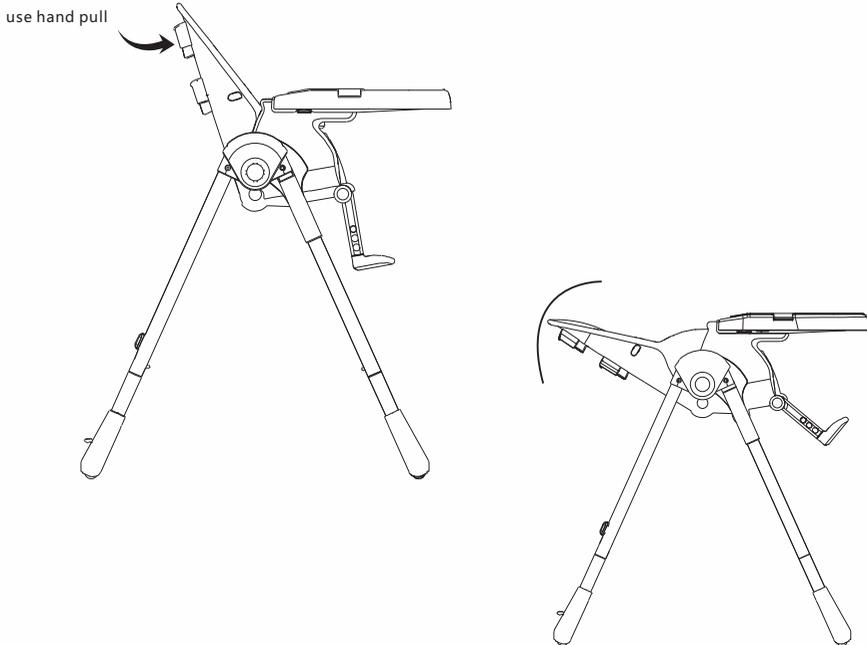

Pull the adjusting button at the back of backrest and force on front and back direction. The backrest can be adjusted to your needed angle. It can be adjusted with six positions


(pic 8)

Safety harness

⚠ WARNING: Must always use the restraint system!

Harness using

Release all the buckles on the restraint, place the baby in the seat and bring the safety strap up between baby's legs and the harness over the baby's shoulders. Fasten each buckle and pull the straps to tighten until comfortable.



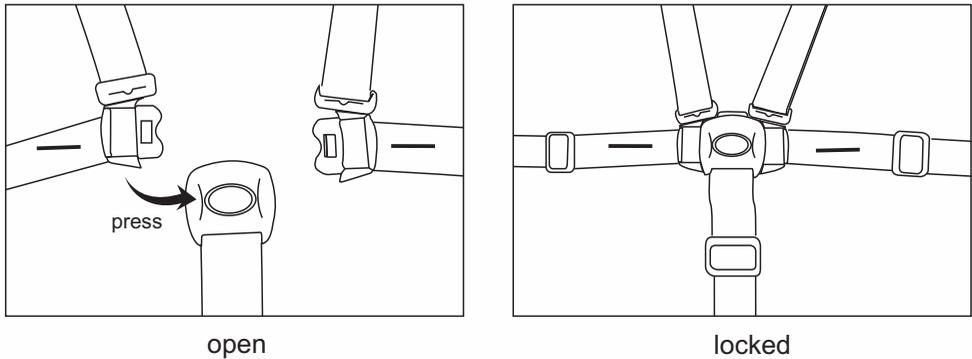


Insert the plug into the buckles, until hear “click”; press the buckles of harness to open it.

(pic 9)


Folding and unfolding instruction

- 1、 Press the lift button at the backrest and adjust the seat to the lowest position①
- 2、 Press the bilateral folded buttons and close the front and rear legs together② (figure 10)
- 3、 Hook the tray on the back legs before folding the high chair③

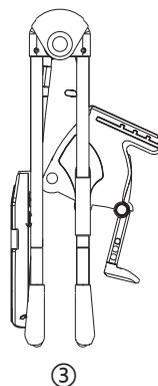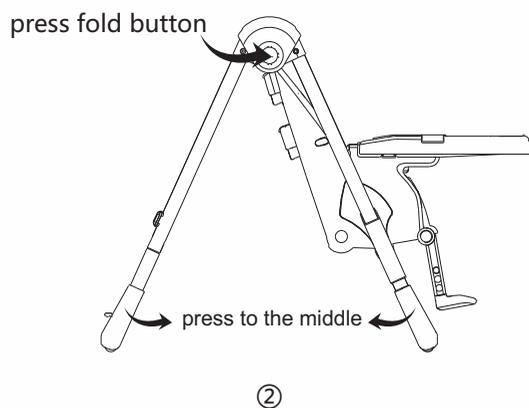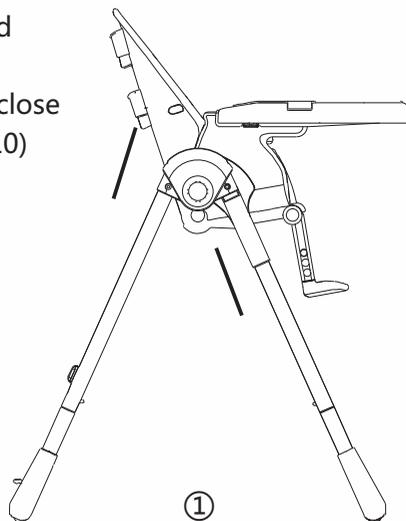

(pic 10)


Spare parts

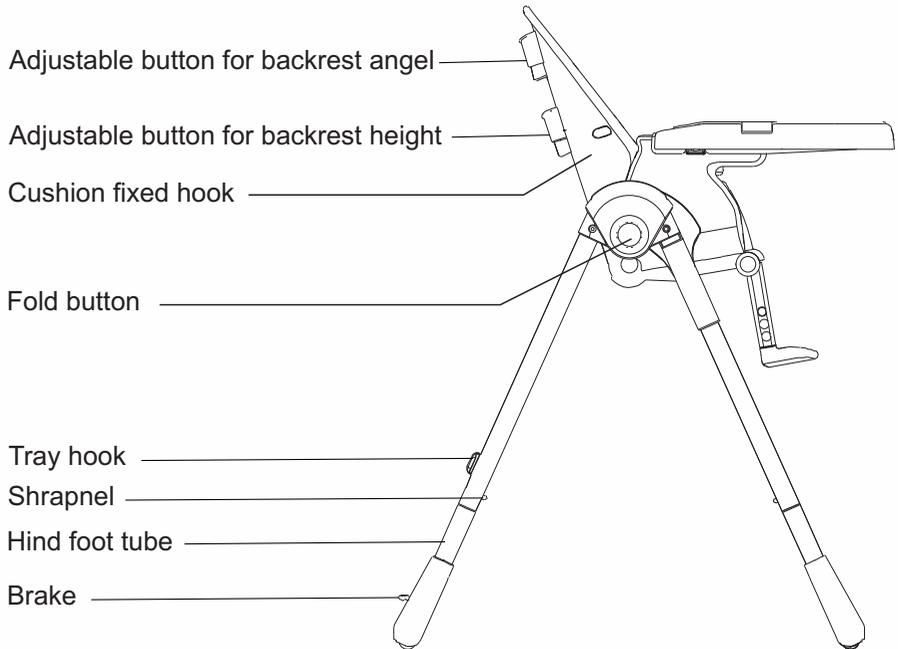

(pic 11)

Spare parts

- Use soft cloth to clean the smudge.
- Please clean the chair, dry the water when not use it, and store in a dry, cool environment.
- Please maintain in time when shrapnel , screw loose or lost.

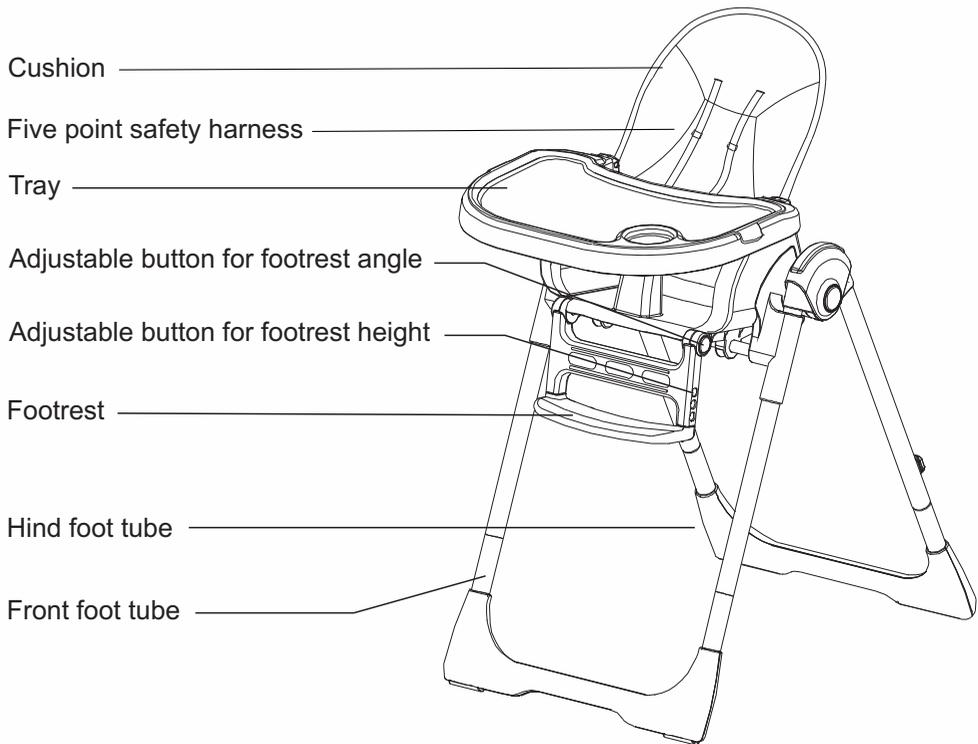

(pic 12)

Carena

 Designed in Sweden.

Made in China for Scandinavian Kids Group AB, Sveavägen 151, SE-113 46, Sweden
www.carenababy.com customerservice@carena.com